




**WARNING:**  
Look inside the bottom canister for the  
mounting bracket.

The mounting bracket is inside the foam in the bottom canister.

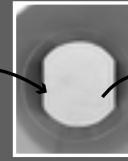

# Central Vacuum System User Manual



For the installation video,  
Scan the QR code or  
visit YouTube video



at: [www.youtube.com/@ovovacuum4302](http://www.youtube.com/@ovovacuum4302)

**For product codes ending -25H**  
ex: OVO-630ST-25H  
OVO-750SM-25H

**For product codes ending -35H**  
ex: OVO-600ST-35H  
OVO-750SM-35H

SMART units:



at: [www.youtube.com/@ovovacuum4302](http://www.youtube.com/@ovovacuum4302)



NAUM-EN-OVO-600ST-750SM-12-20-2024

FOR SMART UNIT ONLY:  
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

# Index

1. Important safety instructions .....	3
2. General guidelines and references .....	4
Grounding requirements	
General guidelines to be respected at all times	
3. Models / Hybrid filtration system .....	5
4. Installation.....	6 - 9
5. System operation instructions.....	10
6. System maintenance.....	10
Filtration system	
7. Trouble Shooting.....	11 - 12
8. Low-voltage system (When not connected to the application).....	13
LED interpretation chart	
9. Connection of the unit to the application (Smart Only) .....	14 - 17
9.1 Reset the unit / Change user (Smart Only).....	17
9.2 Product features and status menu (Smart Only).....	18 - 20
9.3 Application trouble shooting (Smart Only) .....	21
9.4 Connection to Google Assistant (Smart Only) .....	21
9.5 Connection with Alexa (Smart Only).....	22
10. Low-voltage system (when connected to the application) (Smart Only) .....	23
Smart LED Interpretation chart	

# 1.IMPORTANT SAFETY INSTRUCTIONS

CAREFULLY READ ALL OF THESE INSTRUCTIONS BEFORE USING THIS CENTRAL VACUUM SYSTEM.

When using an electrical appliance, it is necessary to observe certain basic precautions.



## **WARNING - TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:**

- Unplug the power cord from the electrical outlet before performing any maintenance on the power unit.
- DO NOT install outdoors, protect against weathering, and do not use on wet surfaces.
- This appliance must not be used as a toy. Exercise extreme caution when children are using the system or when it is in use in the vicinity of a child or infant.
- This system must be used in accordance with the instructions provided in this manual. Use only the accessories recommended by the manufacturer.
- DO NOT use the system if the power cord or electrical outlet is damaged, if the system does not function normally, if it has been dropped, was left outdoors for an extended period, or if it has been immersed in liquid. In these cases, the power unit must be sent to an authorized service center.
- DO NOT use the power cord to pull or lift the power unit, or use it as a handle. Be careful not to pinch it in a door or let it hang on a sharp corner or edge.
- Check the openings for any foreign objects that may be lodged in the pipe. If found, remove the obstructing objects to ensure maximum airflow.
- Keep the power cord away from contact with any hot objects or surfaces.
- **DO NOT unplug the power cord by pulling on it. Always remove it directly from the electrical outlet.**
- **DO NOT use the system or its accessories with wet hands.**
- Keep hair, clothing, fingers, body parts, or other objects away from any openings or moving parts of the system.
- Deactivate all functions of the system before unplugging the power cord from the electrical socket. Take necessary precautions when using the system on stairs.
- **DO NOT use the system to pick up flammable liquids or fuels (e.g., gasoline) or use it in areas where such liquids may be present.**
- Only plug the power cord into a properly grounded electrical socket. For more information on this subject, please refer to the "Grounding Specifications" on page 4 (section 2).
- **The exhaust of the power unit must not be directed against a wall, ceiling, or inside a closed space within a building or structure. It is recommended that the exhaust be vented outdoors.**
- DO NOT pick up hot ashes, glowing embers, smoking materials, incandescent materials, cigarette butts, matches, etc...
- DO NOT place anything on top of the power unit or near it, as this could cause the unit to overheat.
- DO NOT use the power unit if the pipe network is clogged. This will cause the unit to overheat.

**KEEP THESE INSTRUCTIONS IN A SAFE PLACE**

**THIS POWER UNIT IS FOR DOMESTIC USE ONLY**

## 2. GENERAL GUIDELINES AND REFERENCES

### ELECTRICAL GROUNDING SPECIFICATIONS

The system's power unit must be grounded. In the event of a malfunction or power unit failure, grounding provides the path of least resistance for any electrical current, thereby minimizing the risk of electric shock. The power unit's power cord is 72 inches or 1.83 meters long and is equipped with a grounding wire and pin. The power unit's power cord must always be directly plugged into a suitable electrical outlet that is properly installed and grounded in accordance with current local electrical standards.

**Do not use extension cords to connect the power unit to the electrical outlet.**

#### **Note for smart power unit:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### **WARNING**

Improper connection of the power unit grounding wire can result in the risk of electric shock. If you are unsure about proper grounding, contact a professional electrician. Do not modify the power cord supplied with this power unit. If the power cord connector does not fit your electrical outlet, have the proper electrical outlet installed by a professional electrician. This power unit is designed to be used on a nominal electrical circuit of 15 A, 110-120 VAC at 60 Hz. The power cord is equipped with a grounding pin. Ensure that the power cord is plugged into an electrical outlet with the same specifications. This appliance should not be used with an adapter. While it is recommended to install this unit on its independent circuit and breaker, it is not necessary to do so.

#### **IMPORTANT**

The manufacturer shall not be held responsible for damages caused by the inappropriate use of this system. The warranty does not cover damages caused by improper use of this system or problems resulting from an installation that does not meet the specifications or any structural or functional alterations made to the power unit. An inappropriate or non-recommended installation of the system or the power unit, made without adhering to the directives outlined in this document, will be considered misuse. The limited warranty and user manual outline all conditions and restrictions. To optimize the performance and lifespan of your OVO power unit, it is essential to perform regular maintenance and cleaning of the filter according to the guidelines listed in this user manual.

General guidelines must be adhered to at all times:



**The power unit must be installed by a qualified electrician.**

1. The power unit must be installed in a well-ventilated area, protected from weather conditions, and kept away from all sources of heat.
2. This central vacuum system is designed for dry surfaces only and must not be used on wet surfaces or to pick up liquids. It should not be used to clean wet carpets or any wet ground.
3. The filter cage must always be covered by the permanent filter during the system's operation.
4. The motor housing must never be obstructed to prevent damage or overheating.
5. DO NOT use this system to pick up mud or similar substances, or to vacuum baking flour, talcum powder, cement, or gypsum dust, as it will obstruct and clog the filter media. The filter must be cleaned several times during and after such pick-ups to prevent motor overheating and potential damage.
6. DO NOT attempt to shorten or modify the power cord in any way.
7. For safety purposes, unplug the power cord before performing maintenance or servicing.
8. To maintain the validity of the warranty, any repairs or servicing on the power unit must be performed only by an authorized service center.
9. The power unit should be positioned so that the power cord and electrical outlet are always easily accessible.
10. Regarding the use of an electrified valve (110-120 VAC) (intended for the connection of a current carrying hose and electrically motorized brush):
  - Only connect a current-carrying hose to this wall valve.
  - DO NOT install a current-carrying valve outdoors.
  - DO NOT use a damaged hose; bring it to an authorized service center for repair.

## 3. MODELS

### 25 L Canister

For product codes that end with: -25H



### 35 L Canister

For product codes that end with: -35H



The power unit must be installed in a well-ventilated area, protected from the weather. It must be easily accessible and positioned away from any heat source. The power unit must be installed near an appropriate electrical outlet. Ensure that there is at least 6 inches (15 cm) of clearance space all around the unit.

## 3.1 HYBRID SYSTEMS

Can be used with or without disposable bags



- The permanent filter must be **IN PLACE AT ALL TIMES** even when using a filtration bag.
- The permanent filter must be washed every time the canister is emptied to prevent debris from accumulating on the filter and avoid debris entering the motor compartment. (MACHINE WASHABLE)
- The permanent filter must be replaced for a new one every two (2) years to maintain the warranty on the vacuum. It must be replaced with OVO filter: FP-8 (for product code that end with: -25H) or FP-12 (for product code that end with: -35H).
- Disposable bags for these units are: FD-12.5L-3OVO (For products with a code ending in: -25H) or FD-22.5L-3OVO (For products with a code ending in: -35H).

**To purchase bags and filters, scan the QR code or visit our website:**

USA: [www.myovo.net/product-category/bags-and-filter](http://www.myovo.net/product-category/bags-and-filter)

CANADA: [www.myovo.ca/product-category/bags-and-filter](http://www.myovo.ca/product-category/bags-and-filter)

USA



CANADA




## 4. INSTALLATION



### NOTE

APPLICABLE TO ALL POWER UNITS: The power unit must be installed in a well-ventilated area, protected from the weather. It must be easily accessible and positioned away from any heat source. The power unit must be installed near an appropriate electrical outlet. Ensure that there is at least 6 inches (15 cm) of clearance space all around the unit.

1. Measure the bottom clearance space to be able to remove your bag and your canister easily.

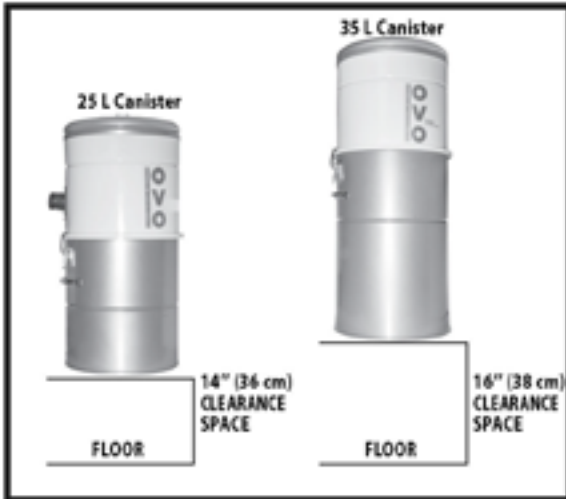

### For 25 L Canister

Minimum clearance space 14" ( 36 cm)

For the product codes that ends with: -25H

### For 35 L Canister

Minimum clearance space 16" ( 38 cm)

For the product codes that ends with: -35H


2. Measure where your bracket will be installed.



**NOTE:** We recommend installing a wooden panel 16 inches (40 cm) high, 0.75 inches (2 cm) thick, and 10 inches (25 cm) wide to strengthen the support.

Take the measurement from the bottom of the vacuum to the point where the hook will be inserted into the vacuum.

Add this measurement to the bottom clearance measurement.

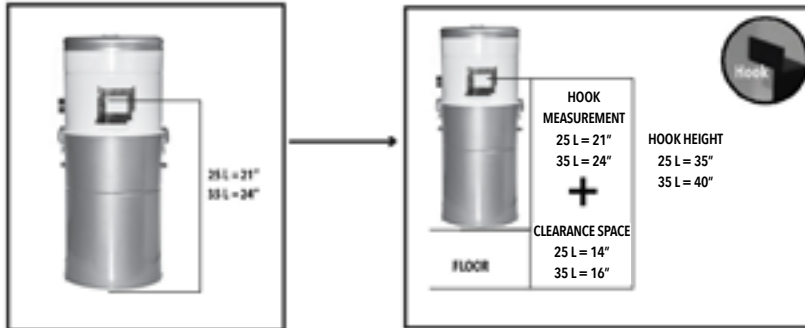

### Installation on a gypsum wall (Gyprock)

-Prepare the wall by installing a plywood mounting plate (not provided) that is 16 inches (40 cm) high, 0.75 inches (2 cm) thick, and 10 inches (25 cm) wide to be screwed into at least 2 studs.


-Drill three (3) holes with a 3/8-inch (10 mm) wood drill bit. Place the provided rubber inserts. Secure the wall bracket with the provided screws.

### Installation on a concrete wall:

Drill three (3) holes with a 3/8-inch (10 mm) masonry drill bit. Place the provided rubber inserts. Secure the wall bracket with the provided screws.

3. Hang your unit on the bracket.

Insert the hook into the middle of the bracket on the vacuum.

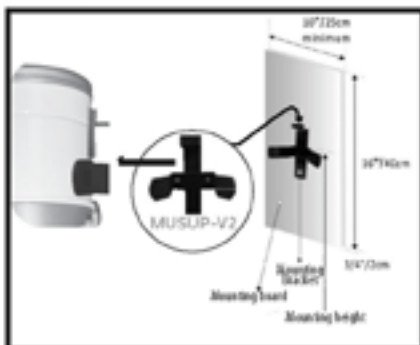

## 4. INSTALLATION (Cont.) - If installing a non-smart vacuum unit

Connect the top air and debris intake pipe to the PVC piping network



We suggest to use flexible pipes (**SOLD SEPARATELY**) for faster and easier installation



**NOTE:** Our flexible pipes are 12" long and comes in a set of 2 with connection pieces. You can connect two (2) flexible pipes together by using the PVC pipe pieces and the provided metal ring. (NEVER USE GLUE) - **OUR FLEXIBLE PIPE KIT IS SOLD SEPARATELY**

Step-1



Connect one side of the flex pipes to the piping network. Secure it with the ring. DO NOT GLUE.

Step-2



On the top air intake of the vacuum (metallic tube), Insert a coupling. DO NOT GLUE.

Step-3



Insert a 2" (5 cm) PVC pipe piece in the top air intake coupling DO NOT GLUE.

Step-4



Connect the other end of your flexible pipe to the PVC pipe piece and secure it with provide metal ring (DO NOT GLUE).

### If using Hard pipe

1st, you need to map the trajectory of your piping  
Then you must glue pipes and elbows together all the way to the top air intake  
This method requires: PVC solvent cement glue, 2" PVC pipes, sweep elbows, couplings and a pipe cutter.



Scan to purchase flexible pipes or piping installation kit on our web site.



USA



Canada

Connect your low-voltage wire

**IF YOU HAVE MULTIPLE INCOMING WIRES, FOLLOW STEP 5.1 TO 5.5**

**IF YOU HAVE ONLY 1 INCOMING WIRE, FOLLOW STEP 5.1, 5.4 AND 5.5**




**Note:** Never connect more than 1 wire into the Low-Voltage socket

Step 5.1




First, start a new 18 gauge low-voltage wire.

Step 5.2

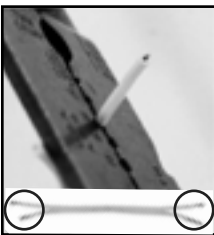

Strip both ends of the new wire in **step 5.1** for about 3/8" (10 mm).

Step 5.3

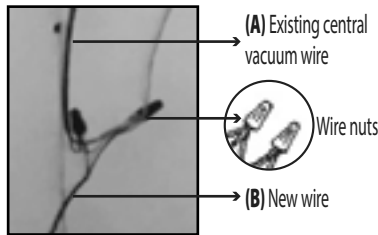


Connect one end of the new wire (B) to the existing central vacuum wire network (A) with wire nuts.

Step 5.4



Secure the wire nuts with electrical tape.

Step 5.5

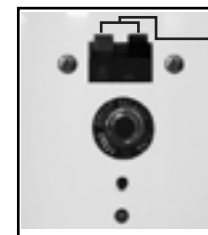

Push  
Live (negative side) in the black terminal and neutral (positive side) in the red terminal

Connect the other end of your new wire (conductors) into the low-voltage socket on the vacuum while simultaneously pushing on their respective button.

Give a light pull to the wire to make certain that it is well secured in the terminal.

## 6. Plug-in your vacuum



Plug your vacuum into a regular electrical outlet.



LED Light

The LED light will first flash green, then display a steady green.

**Your vacuum is ready to be used.**





## 4.1 INSTALLATION (cont.) - If installing a **Smart** vacuum unit

Connect the top air and debris intake pipe to the PVC piping network

We suggest to use flexible pipes (**SOLD SEPARATELY**) for faster and easier installation



**NOTE:** Our flexible pipes are 12" long and comes in a set of 2 with connection pieces. You can connect two (2) flexible pipes together by using the PVC pipe pieces and the provided metal ring. (NEVER USE GLUE) - **OUR FLEXIBLE PIPE KIT IS SOLD SEPARATELY**

STEP-1



Connect one end of the flexible pipes to the piping network and secure it in place with the metal ring. DO NOT GLUE.

STEP-2



Insert the male end of the T-fitting into the coupling. DO NOT GLUE.

STEP-3



Place the air relief valve into the opening on the side of the T-fitting. DON'T NEED GLUE.

STEP-4



Insert a 2" (5 cm) PVC pipe piece in the top of the T-fitting. DO NOT GLUE.


STEP-5



Connect the other end of your flexible hose to the PVC pipe piece and secure it with the provided metal ring. DO NOT GLUE.


### Step 6: Adjust the air relief valve

Step-6.1

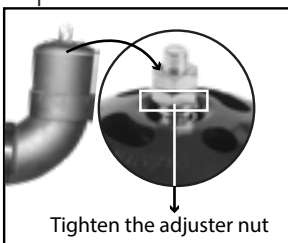


Tighten the adjuster nut (bottom nut) fully to compress the spring, and leave the lock nut (top nut) loose.

Step-6.2

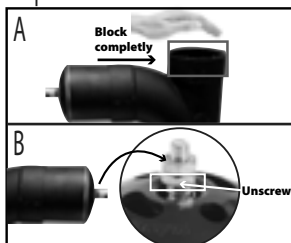


Start the unit. (A) Block the air intake or keep all the inlet valves closed, and (B) unscrew the adjuster nut until it pops. Then, unblock the air intake or open one inlet valve.

Step-6.3

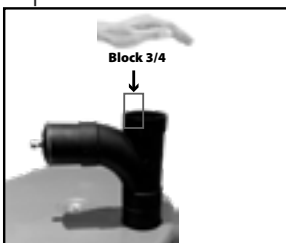


Block 3/4 of the air intake or the inlet valve. The air relief valve should NOT pop.

Step-6.4

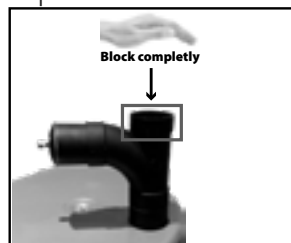

Completely block the air intake or leave all the inlet valves closed. The air relief valve should pop after 1 second. If it doesn't, loosen the nut as per step 6.2.

Step-6.5

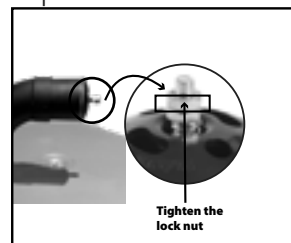

If the air relief valve popped after 1 second in step 6.4, the adjustment is correct. Tighten the lock nut (top nut) to ensure the tension setting remains constant.



#### Air release valve:

**NOTE:** The air relief valve is highly recommended if using the app and the user forgets to shut down the unit.



Scan to see how to adjust the air relief valve or visit our web site at [myovo.net/video/air-release-valve](http://myovo.net/video/air-release-valve)

#### If using Hard pipe

First, you need to map out the trajectory of your piping. Then, proceed to join pipes and elbows together using PVC solvent cement glue, extending all the way to the top air intake. For this method, you will need PVC solvent cement glue, 2-inch PVC pipes, sweep elbows, couplings, and a pipe cutter.



Scan to purchase flexible pipes or piping installation kit on our web site

Canada



USA





7. Connect your low-voltage wire (Skip those steps if using ONLY the app)


IF YOU HAVE MULTIPLE INCOMING WIRES, FOLLOW STEP 7.1 TO 7.5

IF YOU HAVE ONLY 1 INCOMING WIRE, FOLLOW STEP 7.1, 5.4 AND 7.5


 **Note: Never connect more than 1 wire into the Low-Voltage socket**



First, start a new 18 gauge low-voltage wire.

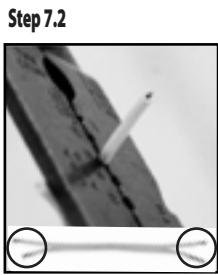


Strip both ends of the new wire in **step 5.1** for about 3/8" (10 mm).

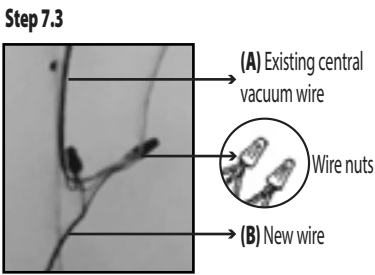

Connect one end of the new wire **(B)** to the existing central vacuum wire network **(A)** with wire nuts.



Secure the wire nuts with electrical tape.

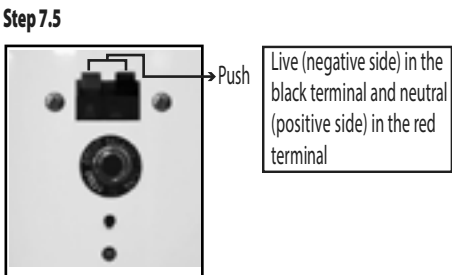


Connect the other end of your new wire (conductors) into the low-voltage socket on the vacuum while simultaneously pushing on their respective button.

Give a light pull to the wire to make certain that it is well secured in the terminal.

8. Plug-in your vacuum



Plug your vacuum into a regular electrical outlet.

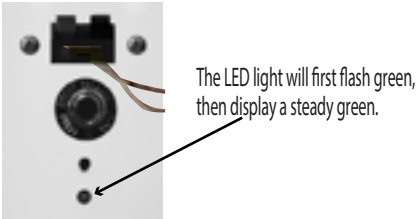

***Your vacuum is ready to be used.***

## 5. SYSTEM OPERATION INSTRUCTIONS

Your new system is now prepared for use. Here are a few simple guidelines to follow when using your OVO Central Vacuum System: Insert the wall end of the hose into any of the vacuum wall inlet valves installed throughout your home. When you're ready to begin, simply press the ON-OFF switch on the hose handle!

NOTE: In reference to the low-voltage system, all vacuum inlet valves are equipped with two (2) spring-loaded metal pins. When the hose wall-end cuff's two (2) metal components come into contact with the two (2) pins inside the inlet, the system becomes energized. You can then activate or deactivate it using the hose handle switch (if this option was chosen). The low-voltage cable is connected in parallel from each inlet valve. It runs throughout the piping network and supplies power to the switch for remotely starting or stopping the power unit, ensuring safety. A standard flexible hose, lacking an interrupter, will start the power unit immediately upon insertion into the valve opening.

## 6. FILTRATION SYSTEM MAINTENANCE

To ensure optimal air quality in your home, the power unit includes a high-efficiency HYBRID filtration system. This system uses a permanent polypropylene washable and reusable filter, along with the option to use a 12.5L or 22.5L disposable filter bag.

 **NOTE: The permanent filter MUST BE IN PLACE AT ALL TIMES; the filter's securing strap must be tight and adjusted to ensure there are no dust or others that goes into the motor propeller.**

### PERMANENT FILTER



The permanent filter should be washed each time the canister is emptied to prevent debris accumulation and to avoid any debris from entering the motor compartment.

To maintain the vacuum's warranty, the permanent filter must be replaced with a new one every two (2) years. The new filter must be either OVO filter: FP-8 (For the product codes that end with: -25H) OR FP-12 (For the product codes that end with: -35H).

### FILTRATION BAGS

 **IMPORTANT**  
**Ensure that the rubber diaphragm is correctly installed onto the intake PVC pipe. Verify that the bag is not cut or damaged, and ensure that the canister is securely in place before restarting the power unit.**


This OVO hybrid power unit may be used with OR without a disposable bag. Bags are sold in 3-pack: FD-12.5L-3OVO: (for product codes that end with: -25H) OR FD-22.5L-3OVO (for product codes that end with: -35H).

The disposable bag must be installed as described here:

- 1- Remove the debris canister
- 2- Remove the dirt-filled bag
- 3- Install the new bag by twisting it into place
- 4- Verify and clean (if necessary) the permanent filter
- 5- Replace the debris canister and secure the latches



NOTE: When replacing the disposable bag, ensure that the rubber diaphragm is correctly installed onto the intake PVC pipe. Verify that the bag is not cut or damaged, and ensure that the canister is securely in place before restarting the power unit. It's recommended to replace the disposable bag or empty the debris canister, as well as clean the permanent filter, 3 or 4 times per year. If the system is used more frequently than usual, repeat the above procedure more often.

 **IMPORTANT**  
**NEVER use this system to pick up liquids, mud, or combustible materials. Vacuuming baking flour, talcum powder, cement, or gypsum dust will result in obstructing and potentially clogging the filter media. You'll need to clean the filter several times during and after such pick-ups. Otherwise, the power unit's performance will be affected, and the motor may overheat and become damaged.**

# 7. TROUBLE SHOOTING

## GENERAL



The following may cause failure of the power unit:



- Inadequate electrical power (Voltage or Amperage). Verify that the electrical power supplied complies with the power unit's requirement
- Abnormal performances of the electronic control module or the motor

Before calling a service technician, in case of a malfunction, please review the following situations by running the following simple diagnostics:

SITUATION	VERIFICATION
THE POWER UNIT DOES NOT OPERATE	Verify that there is power in the electrical outlet.
	Verify that the Breaker or the fuse on your Electrical Panel was not triggered to the "off " position.
	Verify that the power cord is adequately plugged in the electrical outlet.
	Verify that the mini-breaker button on the side of the unit is pushed-in.
	Short-circuit the low-voltage connections on the side of the power unit. <b>See next page " how to perform a By Pass to test the system"</b> . If the power unit starts, the problem is somewhere else in the inlet low-voltage wiring network or on the current carrying hose.
	Verify that all low-voltage connections are adequate at every inlet valve location. Open every inlet valve, one at a time, and make contact between the two (2) small pins with a metal object. If all the inlet valves are functioning properly, take a look at the low-voltage circuit or switch on the hose.
	If the power Unit still does not work after the above diagnostics, contact us directly at 1-800-776-7891 or via email at info@myovo.net.

SITUATION	VERIFICATION
LOW OR NO SUCTION OR AIR FLOW AT ALL	Verify the cleaning tool or the hose for possible obstruction. If the hose is obstructed, try to "massage" the clog out. Try to "reverse" the hose by inserting the cleaning end of the hose in the wall inlet valve and making contact with the two (2) small metal contact pins, hold your hand around the opening for air tightness.
	Verify if the disposable bag is full, if so replace disposable bag and/or that the filter may be clogged, if so clean the permanent filter.
	Verify if the debris canister is adequately placed on the unit with no air leaks.
	Verify that all other inlet valves are shut and that there is no air leaks.
	If one of the vacuum inlet valves has noticeably less power than the others, it is a sign of a clog at this particular inlet valve. Write a different number on a few paper tissues and pick one up in every inlet valve in the home; see in the debris canister which one is missing and find which inlet valve is obstructed.
	If none of the inlet valves function properly and the power unit is running; disconnect the air intake pipe on the top of the unit from the debris intake line. If you have plenty of suction there, it is a sign that the clog is between the last inlet valve and the power unit.
	If the power Unit still does not work after the above diagnostics, contact us directly at 1-800-776-7891 or via email at info@myovo.net.

SITUATION	VERIFICATION
VACUUM WILL NOT START OR STOP	<b>Option 1: Hose on/off switch</b> When setting the hose switch to OFF, you must wait 3 seconds before the vacuum shuts down. If the switch is pressed before this interval has elapsed, the vacuum will remain on. Wait three seconds after setting the switch to OFF and the unit will stop.
	<b>Option 2: Hose not properly plugged in</b> Make sure to properly plug the hose in the inlet (see the picture to see proper plug-in method)
	 <p>Make sure the black section is aligned to the midpoint between the two small pins.</p>
	<b>Option 3: The pin spring is broken</b> If the pins do not come up after being pushed, then their spring is probably broken, and this could cause the vacuum to fail to start or stop. In this case, the spring must be fixed.
	 <p>If the pins, once pushed, do not come up; the spring is probably broken and could cause the vacuum not to start or stop. In which case the spring must be fixed.</p>
	<b>Option 4:</b> If all of the above works, proceed with a bypass. See the step below. If the vacuum starts, there may be a problem with the cables. If the unit does not start contact us directly at 1-800-776-7891 or via email at <a href="mailto:info@myovo.net">info@myovo.net</a>

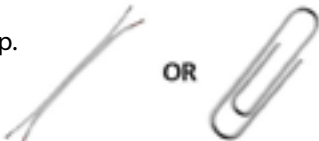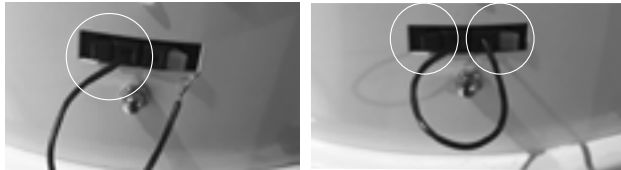SITUATION	VERIFICATION
HOW TO PERFORM A BYPASS TO TEST THE VACUUM	<b>Step 1:</b> Use wire or a paper clip.
	 <p>OR</p>
	<b>Step 2:</b> Insert one side of the wire or paper clip into the black terminal on the low-voltage socket and the other into the red terminal. The unit should start.
	
	<b>Step 3:</b> Remove the wire and wait 3 seconds. The unit should stop.

For more troubleshooting tips or answers to your questions, visit our website.

USA: [www.myovo.net/trouble-shooting](http://www.myovo.net/trouble-shooting)

CANADA: [www.myovo.ca/trouble-shooting](http://www.myovo.ca/trouble-shooting)

## 8. LOW-VOLTAGE SYSTEM TECHNOLOGY

**FOR TRADITIONAL UNITS ONLY. FOR SMART UNIT, REFER TO PAGE 23.**

### LED status interpretation guide

This **OVO** Central Vacuum Power Unit is provided with an LED status indicator to keep you informed on the different states and functions during its operation. Reading the following table will allow you to identify the status of your appliance by the different behaviors of the LED.



LED Light

Status	Color	Legend
○	OFF	The power unit is not connected to an electrical outlet.
●	GREEN	<b>(Solid green light)</b> The system is operational.
<b>Solid</b> ● <b>Operational/ Requirements</b>		


For models with no reset



LED →


Status	Color	Legend
○	OFF	The power unit is not connected to an electrical outlet.
☀	BLINKING FAST GREEN	The power unit has just been connected to the power source. The light will blink fast for few second and turn into a solid green.
●	GREEN	<b>(Solid green light)</b> The system is operational.
☀	BLINKING SLOW GREEN	Stop power unit / change bag or empty canister / wash the filter. Press and hold the reset button for over 5 seconds. The light will stop blinking and return to solid green.
●	ORANGE	Service Due.
☀	BLINKING SLOW ORANGE	Stop power unit / change bag or empty canister / wash the filter. Press and hold the reset button for over 5 seconds. The light will stop blinking and return to solid orange.
●	RED	Stop using. Service Overdue.
<b>Solid</b> ● <b>Operational/ Requirements</b> <b>Blink slow</b> ☀ <b>Warning Action Required</b> <b>Blink fast</b> ☀ <b>Booting System</b>		

For models with reset

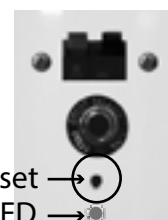

Reset →  
LED →

## SAFETY NOTES


- Always unplug the central vacuum power unit to prevent the risk of electrocution.
- Ensure that the work area is safe and clear before installing your new OVO central vacuum power unit.
- Wear the necessary protective clothing and equipment before starting any work (such as goggles and gloves).
- Use the correct and properly functioning tools, including: [complete the list as needed]
  - Hammer
  - Phillips head screwdriver (cruciform) 
  - Measuring tape
  - Level
  - Drill; with wood or concrete bit of 3/8" (10mm)
  - Pliers
  - Wire stripper



**WARNING: This smart central vacuum only works on 2.4 GHz WiFi!**

## 9. CONNECTING THE UNIT TO THE APP

Our smart vacuum can be used either like a normal central vacuum system or by connecting it to the Nadair smart app on your smart phone. Follow these steps to connect the vacuum or scan the following QR code:

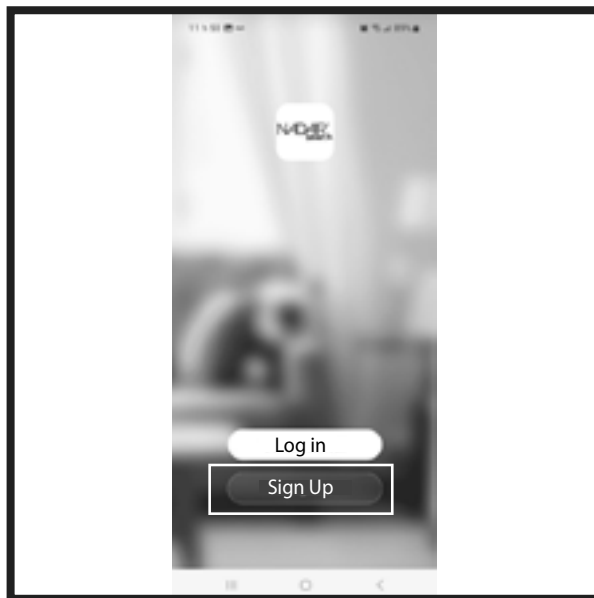

### Step 1:

Go to your app store and download the **Nadair Smart app** or scan one of the QR code below.



### Step 2:

Once installed, open it and create an sign up.



### Step 3:

Next, you will be redirected to the main page. Now you can add a new device. Click on the + at the top of the page.

### Step 4:

(A) You can let the application perform an automatic search, or (B) you can add the device manually if the automatic search fails.





**WARNING:** This smart central vacuum only works on 2.4 GHz WiFi!

## 9. CONNECTING THE UNIT TO THE APP (Cont.)

**Step 5A** - If using the automatic search


A

**Quickly press and release**




B

**Immediately press and hold 5 seconds**

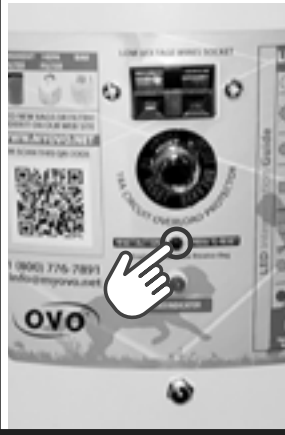

5A.1- On the central vacuum unit (A) **quickly press and release the reset button** and (B) **immediately press and hold the reset button for 5 seconds**.

The light will flash blue quickly, then go through a series of colors and will become solid blue

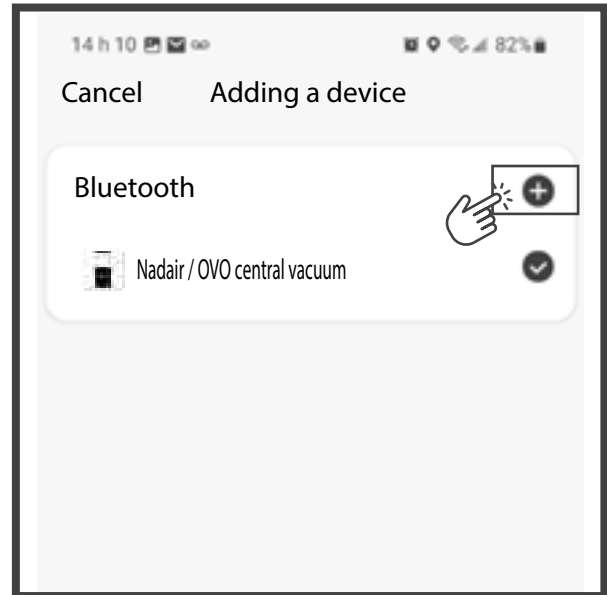

5A.2- After adding the device, you will be redirected to the main page. You will now be able to use the vacuum from your phone.



5A.3- After adding the device, you will be redirected to the main page. You are now connected. (A) Click on "OVO central vacuum" to access the product features menu. (B) Click on the power icon to quickly power on and off your unit.



5A.4- Your unit is now connected to the app and is ready to be used. **See pages 18 to 20 for the product features and status menu.**



**WARNING:** This smart central vacuum only works on 2.4 GHz WiFi!

## 9. CONNECTING THE UNIT TO THE APP (Cont.)


**Step 5B** - If need to be added manually



5B.1- Select the central vacuum icon.


A

**Quickly press and release**

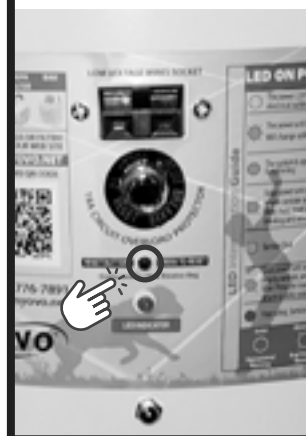


B

**Immediately press and hold 5 seconds**

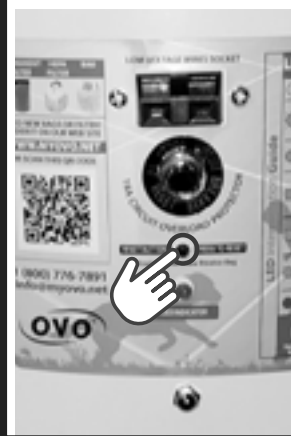


5B.2- On the central vacuum unit (A) **quickly press and release the reset button** and (B) **immediately press and hold the reset button for 5 seconds**.

The light will flash blue quickly, then go through a series of colors and will become solid blue.

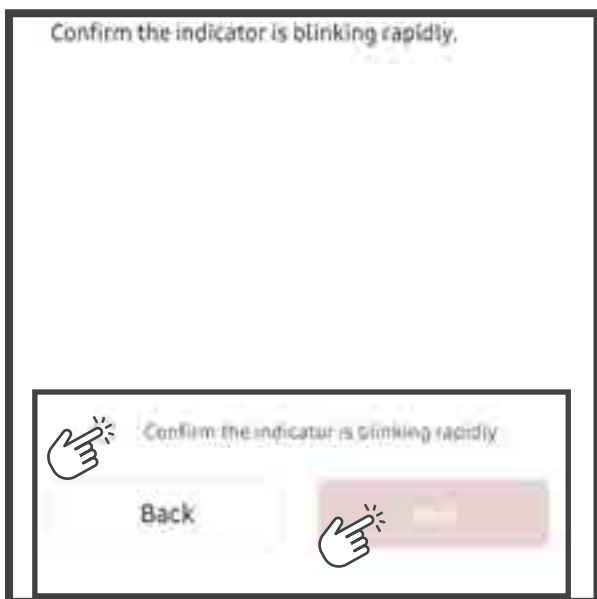

5B.3- In the app, at the bottom of the page, confirm that the light is flashing on the vacuum, then select the "Next" icon.

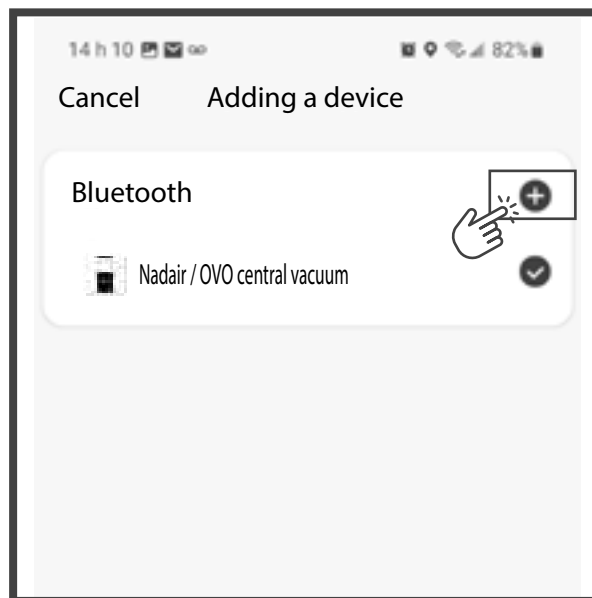


5B.4- In the app, the device will appear. Click on the add button (+) and follow the steps.



**WARNING:** This smart central vacuum only works on 2.4 GHz WiFi!

## 9. CONNECTING THE UNIT TO THE APP (Cont.)


**Step 5B** - If need to be added manually (Cont.)

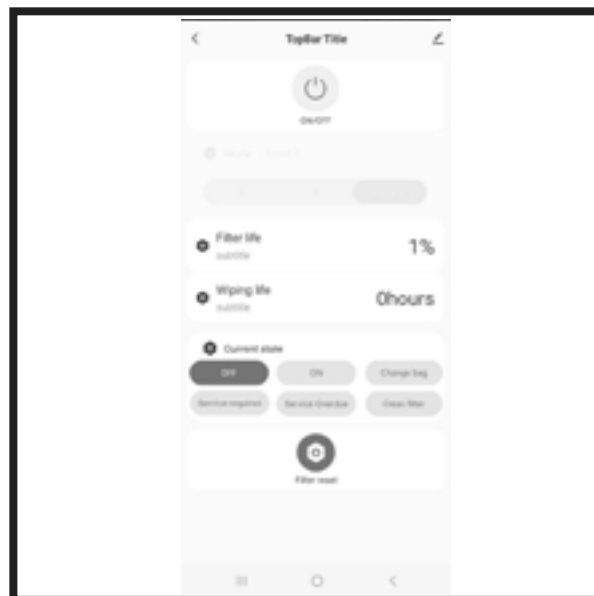

5B.5- After adding the device, you will be redirected to the main page. You are now connected. (A) Click on "Nadair / OVO central vacuum" to access the product features menu. (B) Click on the power icon to quickly power on and off your unit.

5B.6- Your unit is now connected to the app and is ready to be used. **See pages 18 to 20 for the product features and status menu.**

## 9.1 RESETTING THE UNIT / CHANGING USER

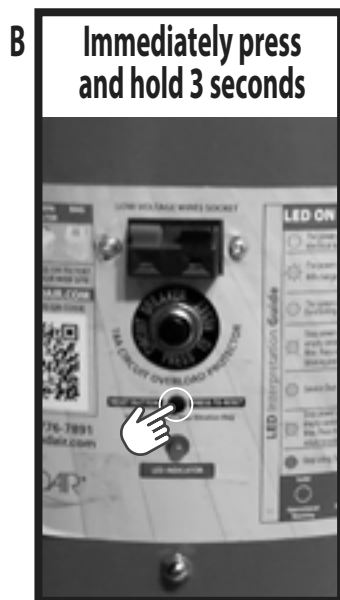

On the central vacuum unit (A) **quickly press and release the reset button** and (B) **immediately press and hold the reset button for 3 seconds.**

The light will flash blue quickly, and will become solid blue when the unit is connected to the app. If the pairing failed, the light will become solid green. Retry the step above to connect the unit to your device.




**WARNING: This smart central vacuum only works on 2.4 GHz WiFi!**

## 9.2 PRODUCT FEATURES AND STATUS MENU

Learn how to use the device panel to control your central vacuum from your phone

### 9.2 a) SECTION 1: ON-OFF / SPEED CONTROL

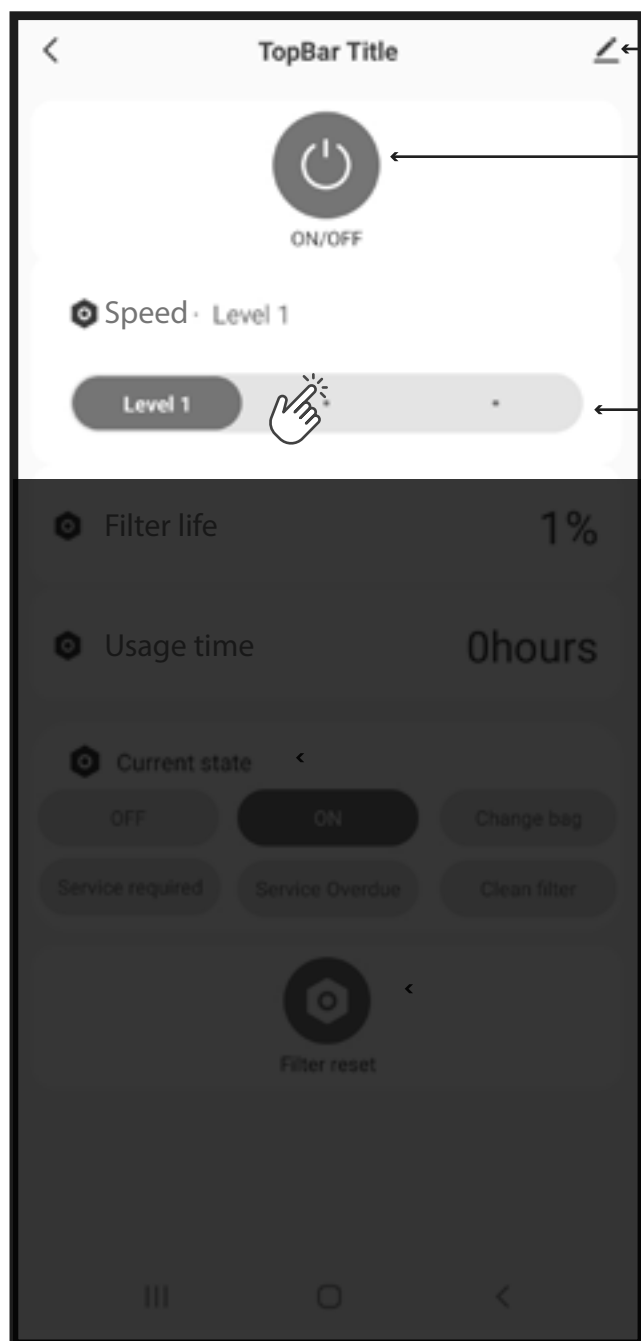

Device information and option

#### A) ON / OFF Button

To start and stop your unit from your smart device

**NOTE:** This central vacuum unit is equipped with soft-start/stop technology. It adds 20% to the life expectancy of your OVO central vacuum motor and automatically vacuums debris out of the hose and piping network to ensure no debris falls on the floor after vacuuming.

#### B) Speed levels (suction)

Three (3) speed levels of suction strength to adapt to any situation. Click on the dots to change the level.

Level 1 = Low suction power

Level 2 = Medium suction power

Level 3 = High suction power.

**NOTE:** This central vacuum unit is equipped with a speed power selection memory.

1) If the device is shut down at a selected/set speed by the user, and the user restart the device within the next 30 minutes, the device will restart at the last speed.

2) If the device is restarted 30 minutes after being shut down, it will automatically reset the speed to 100%.



**WARNING: This smart central vacuum only works on 2.4 GHz WiFi!**

## 9.2 PRODUCT FEATURES AND STATUS MENU (Cont.)

### 9.2 b) SECTION 2: FILTER LIFE AND USAGE TIME

#### A) Filter life:

When at 100%, the icon "change bag" and "clean filter" will be turn blue and the LED light on the unit will be flashing.

Once the bag is changed and the filter is cleaned, press the **filter reset button** in the app. The light will return to solid blue, and the icon "off" will be turn in blue.


#### B) Usage time:

When the unit reaches over 450 hours of usage time, the "Service required" icon turns blue. The unit must therefore be checked to ensure proper functioning (carbon brushes, cleaning, etc.).

When the unit reaches over 500 hours of usage time, the "Service overdue" icon turns blue. STOP USING THE UNIT. SERVICE IS OVERDUE. The unit is damage and might be unrepairable. Warranty, is void.



LED Light

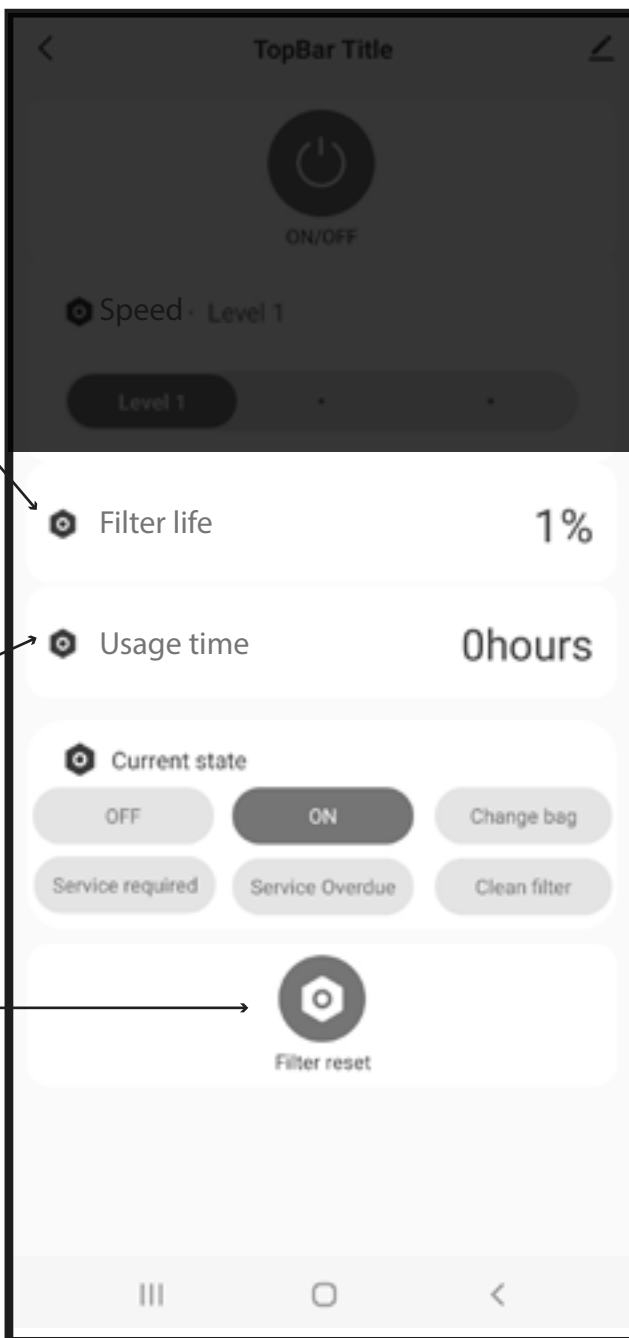




**WARNING: This smart central vacuum only works on 2.4 GHz WiFi!**

## 9.2 PRODUCT FEATURES AND STATUS MENU (Cont.)

### 9.2 c) SECTION 3: UNIT STATE AND RESET

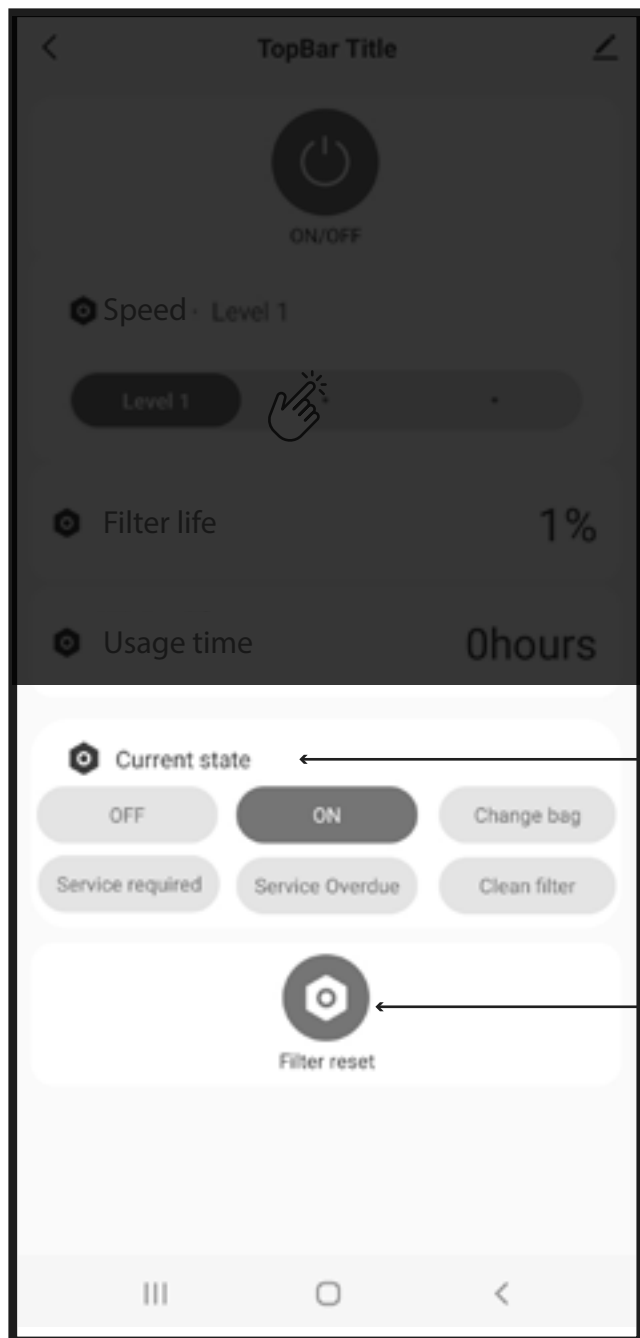

#### A) Unit State:

The state turn in blue will indicate the status of your unit.

Off - The unit is turned off.

On - The unit is running.

Change bag - The bag is full and needs to be replaced.

Service required - The unit has reached 450 hours of usage and needs to be checked.

Service overdue - Stop using, the unit needs to be checked, and might not be covered by the warranty.

Clean filter - The filter is saturated and needs to be cleaned.

#### B) Reset button:

Use this to reset the PC board when the light is flashing blue on the unit or when the current state has changed.




## 9.3 APP TROUBLE SHOOTING

Before calling a service technician, in case of a malfunction of the APP, look at the FAQ section by following the below steps.:


### General APP trouble shooting



1- Select the "Me" button.

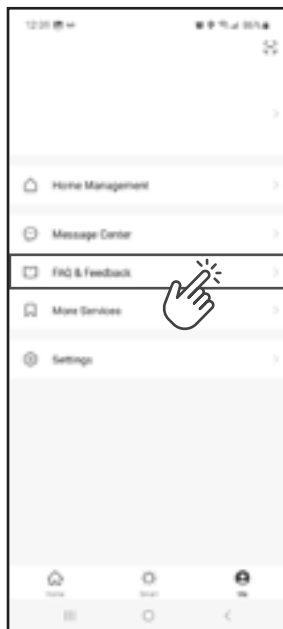

2- Choose the FAQ & Feedback section.

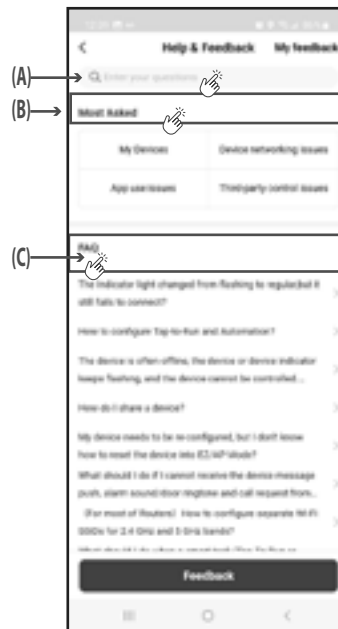


3- (A) Enter your question in the search bar, (B) select most asked or (C) FAQ question.


FAQ and Trouble Shooting Guide available on our web site at:

USA: [www.myovo.net/FAQ](http://www.myovo.net/FAQ) - [myovo.net/trouble-shooting](http://myovo.net/trouble-shooting)  
Canada: [www.myovo.ca/FAQ](http://www.myovo.ca/FAQ) - [myovo.ca/trouble-shooting](http://myovo.ca/trouble-shooting)


## 9.4 CONNECTING WITH GOOGLE ASSISTANT

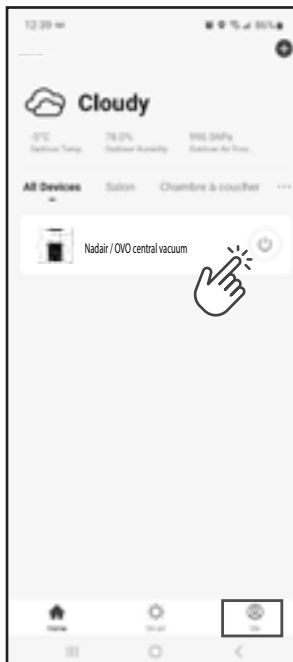


1- Select the "Me" button.

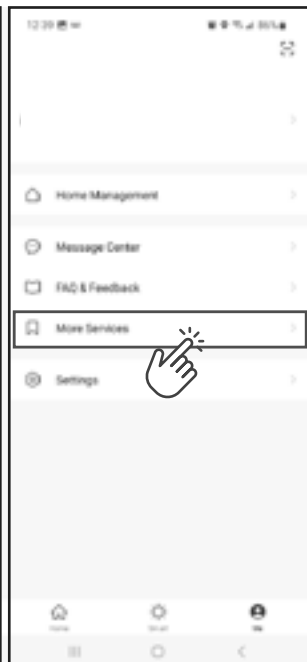

2- Choose "More Services" section.

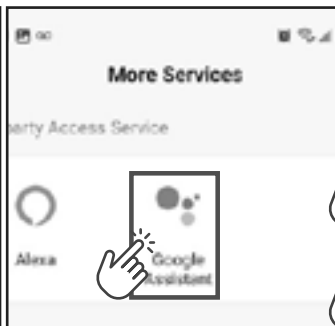

3- Select Google Assistant if you want to link your device to it.

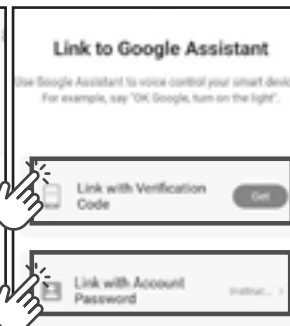


4- Select how you want to link the device with Google assistant.




5- Follow the steps to finish the association.


## 9.5 CONNECTING TO AMAZON ALEXA

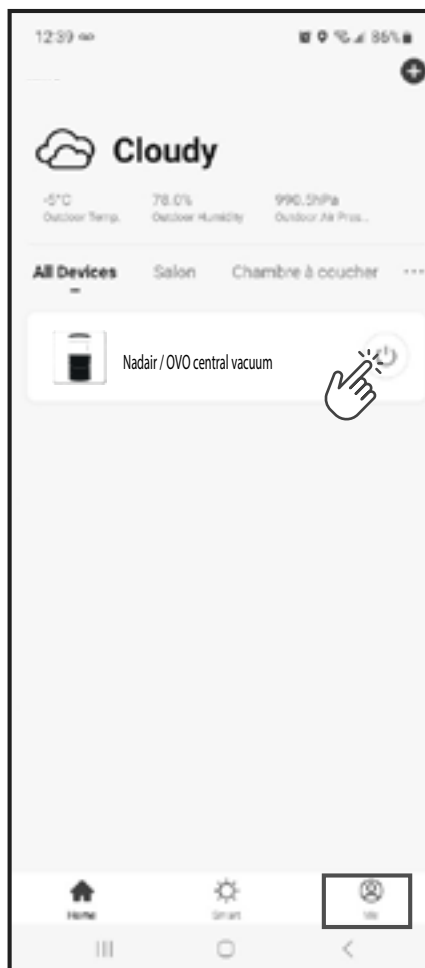

1- Select the "Me" button.

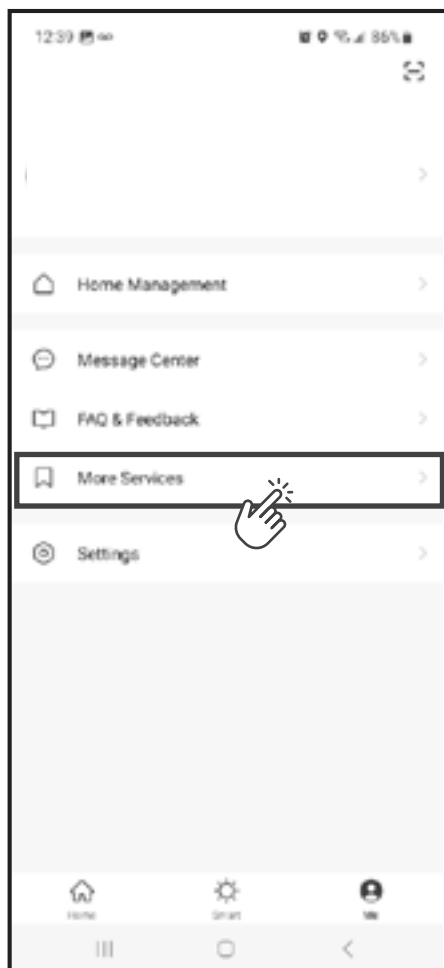


2- Choose "More Services" section.

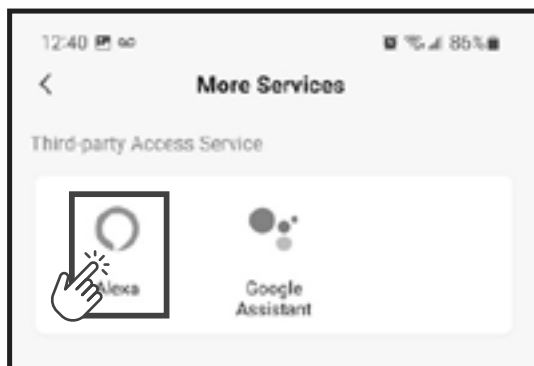

3- Select Alexa if you want to link your device to Amazon Alexa.



4- Select how you want to link the device with Alexa.

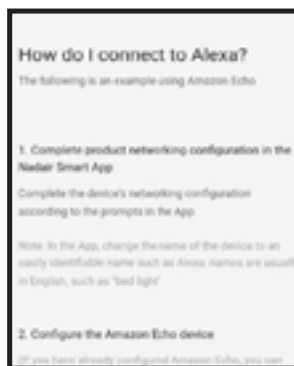

5- Follow the steps to finish the association.



6- Scroll at the bottom for more Alexa trouble shooting.

# 10. LOW-VOLTAGE SYSTEM TECHNOLOGY

**FOR SMART UNITS ONLY. FOR TRADITIONNAL UNIT, REFER TO PAGE 13.**

## LED status interpretation guide

This **OVO** Central Vacuum Power Unit is provided with an LED status indicator to keep you informed on the different states and functions during its operation. Reading the following table will allow you to identify the status of your appliance by the different behaviors of the LED.



LED Light


When connected to the application

Status	Color	Legend
○	OFF	The power unit is not connected to an electrical outlet.
☀	BLINKING FAST BLUE	The power unit has just been connected to the power source and the app <b>OR</b> The unit is disconnected from the app. The light will blink fast for 1 minute and turn into a solid blue.
●	BLUE	<b>(Solid blue light)</b> The system has successfully been added to the app and is operational.
☀	BLINKING SLOW BLUE	Stop power unit / change bag or empty canister / wash the filter. Press and hold the reset button for more than 5 seconds. The light will stop blinking and return to solid blue.
●	ORANGE	Service Due.
☀	BLINKING SLOW ORANGE	Stop power unit / change bag or empty canister / wash the filter. Press and hold the reset button for more than 5 seconds. The light will stop blinking and return to solid orange.
●	RED	Stop using. Service Overdue.
<div> <div>Solid ● Operational/ Requirements</div> <div>Blink slow ☀ Warning Action Required</div> <div>Blink fast ☀ Booting System</div> </div>		

When NOT connected to the application

Status	Color	Legend
○	OFF	The power unit is not connected to an electrical outlet.
☀	BLINKING FAST GREEN	The power unit has just been connected to the power source The light will blink fast for few second and turn into a solid green.
●	GREEN	<b>(Solid green light)</b> The system is operational.
☀	BLINKING SLOW GREEN	Stop power unit / change bag or empty canister / wash the filter. Press and hold the reset button for more than 5 seconds. The light will stop blinking and return to solid green.
●	ORANGE	Service Due.
☀	BLINKING SLOW ORANGE	Stop power unit / change bag or empty canister / wash the filter. Press and hold the reset button for more than 5 seconds. The light will stop blinking and return to solid orange.
●	RED	Stop using. Service Overdue.
<div> <div>Solid ● Operational/ Requirements</div> <div>Blink slow ☀ Warning Action Required</div> <div>Blink fast ☀ Booting System</div> </div>		

## SAFETY NOTES

- Always unplug the central vacuum power unit to prevent the risk of electrocution.
- Ensure that the work area is safe and clear before installing your new OVO central vacuum power unit.
- Wear the necessary protective clothing and equipment before starting any work (such as goggles and gloves).
- Use the correct and properly functioning tools, including: [complete the list as needed]
  - Hammer
  - Phillips head screwdriver (cruciform) 
  - Measuring tape
  - Level
  - Drill; with wood or concrete bit of 3/8" (10mm)
  - Pliers
  - Wire stripper



USA: [www.myovo.net](http://www.myovo.net) | Canada: [www.myovo.ca](http://www.myovo.ca)  
+1-800-776-7891

## TO PURCHASE NEW BAGS AND FILTERS

USA: [www.myovo.net/product-category/bags-and-filter](http://www.myovo.net/product-category/bags-and-filter)  
CANADA: [www.myovo.ca/product-category/bags-and-filter](http://www.myovo.ca/product-category/bags-and-filter)

### ON CENTRAL VACUUM



The warranty below covers only parts and includes a 1-year labor warranty. The use of electrical power other than prescribed on the unit and/or any repairs made by other than authorized service personnel will render this warranty null and void. The warranty will also be null and void if the system and/or its accessories have been used on wet surfaces. This warranty is for residential applications ONLY; it does not cover commercial or industrial usage of the product. The manufacturer is not responsible for any transportation/freight. Proof of purchase is mandatory, along with the invoice for the installation by a qualified electrician.

The Central Vacuum Power Unit Body, Motor & Module – Ten (10) years:

OVO will repair or replace any defective parts of the central vacuum motor, electronic module, body, housing, and dust bin for ten (10) years, as long as you own it, and if used in normal conditions and properly maintained, as stated in the power unit instruction manual. \*1

**Certain conditions apply: The permanent washable filter should be replaced every two (2) years, and the disposable bags must be changed a minimum of twice a year.**

### ON ATTACHMENT KITS



Cleaning tools, carpet brushes, and flexible hoses: Two (2) years warranty:

The cleaning tools, carpet brushes, and flexible hoses, when used adequately and in normal conditions, are warranted for two (2) years from the original date of purchase against manufacturing defects.

**Certain conditions apply: The warranty does not cover the normal wear of bristles, turbines, lamps, belts, carbon brushes, and roller bearings from the turbo brush and electrical carpet brush. \*2**

## TO REGISTER YOUR WARRANTY:

USA: [www.myovo.net/register](http://www.myovo.net/register) | Canada: [www.myovo.ca/register](http://www.myovo.ca/register)

### 25 YEARS LIFETIME WARRANTY ALSO AVAILABLE.



Get a COMPLETE LIFETIME WARRANTY of 25 years on parts of your central vacuum

For only **99,99\$**\*3

\*1: Electronic module warranty is only 1 year

\*2: Garage attachment kit warranty is only 1 year

\*3: With the lifetime warranty for the smart unit, the electronic module warranty is only 1 year

2044 Autoroute 440 Ouest, Laval, QC, H7S 2M9